

3.4 Flight Control Unit (FCU)

The FCU is located on the glare shield and is used to control the autopilot.

Functions include:

- Speed selection
- Heading selection
- Altitude selection
- Vertical modes (climb/descent)

Key concept:

- **Managed Mode** → aircraft follows flight plan
- **Selected Mode** → pilot manually sets values

Revision #1

Created 2026-03-23 15:44:47 UTC by Jonas

Updated 2026-03-23 15:45:01 UTC by Jonas