

5.11 Shutdown

□□ PM Flow

- Engines → OFF
 - Beacon → OFF
 - External Power → ON
-

□□ PF Flow

- Parking Brake → SET
 - Confirm shutdown
-

□ Shutdown Checks

- Engines → OFF
 - Beacon → OFF
 - External Power → ON
-

Revision #2

Created 2026-03-23 17:01:06 UTC by Jonas

Updated 2026-05-27 22:54:53 UTC by Jonas