

5.4 After Start

PM Flow

- ENG MODE → NORM
 - APU BLEED → OFF
 - APU → OFF
 - Anti-Ice → AS REQUIRED
 - Flaps → SET
 - Pitch Trim → SET
-

PF Flow

- Monitor engine start
 - Verify parameters
-

After Start Checks

- Engine Mode → NORM
 - Flaps → SET
 - Trim → SET
-

Revision #2

Created 2026-03-23 16:56:21 UTC by Jonas

Updated 2026-05-27 22:52:24 UTC by Jonas