

7.4 Flight Mode Annunciator (FMA)

Located at the top of the PFD.

Importance

The FMA shows:

- Active modes
 - Armed modes
 - Autothrust status
-

Key Rule

☐ Always confirm mode changes on the FMA

Standard Call

- “FMA checked”
-

Revision #1

Created 2026-03-23 17:21:43 UTC by Jonas

Updated 2026-03-23 17:21:55 UTC by Jonas