

5.4 After Start

? PM Flow

- ENG MODE → NORM
 - APU BLEED → OFF
 - APU → OFF
 - Anti-Ice → AS REQUIRED
 - Flaps → SET
 - Pitch Trim → SET
-

? PF Flow

- Monitor engine start
 - Verify parameters
-

? After Start Checklist

- Engine Mode → NORM
 - Flaps → SET
 - Trim → SET
-

Revision #1

Created 2026-03-23 16:56:21 UTC by Jonas

Updated 2026-03-23 16:56:32 UTC by Jonas